

DFNKNDK

Doctors Knocker - Through Fix

Fitting Instructions


Door Preparation

- 1 Use the Doctors Knocker fitting template (please see page 2 or the box packaging).

Mark holes on the door - please use the holes indicated as **Through Fix**.



The distance between marked holes should measure 145mm (from each centre).

- 2 Once the holes are marked, drill a $\phi 9\text{mm}$ hole at the two marked points through the door.

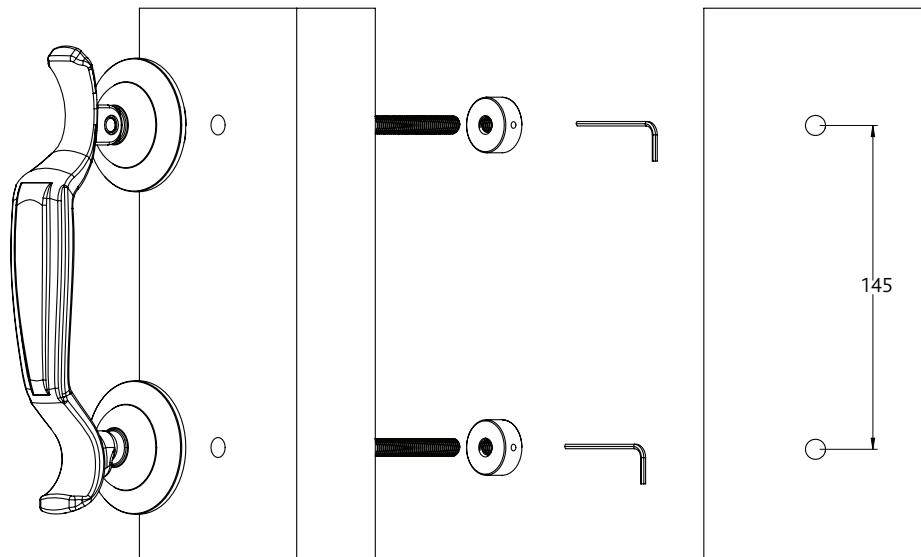

Knocker Assembly and Installation

- 3 Attach the threaded bar to the back of the knocker and then insert into the pre-drilled hole.
- 4 Measure and mark the bar 5-7mm from the door and then cut the bar to the required length (you may need to remove the threaded bar from the knocker to cut).
- 5 Repeat for the second bar.
- 6 When both bars are the required length, re-insert back into the back of the knocker.
- 7 Insert the bars through the drilled holes in the door and secure with the two internal fixing bolts, use the Allen key to tighten.

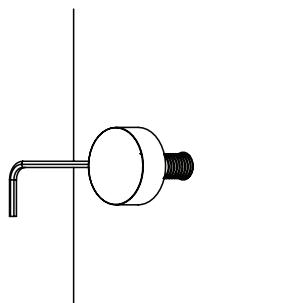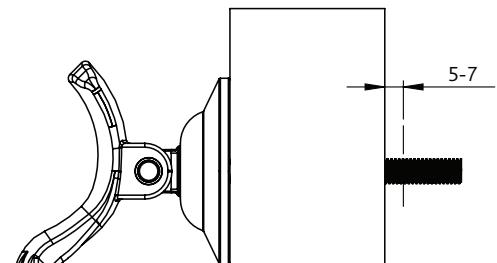




DFNKNDK

Doctors Knocker - Through Fix

Fitting Instructions

Drilling Template

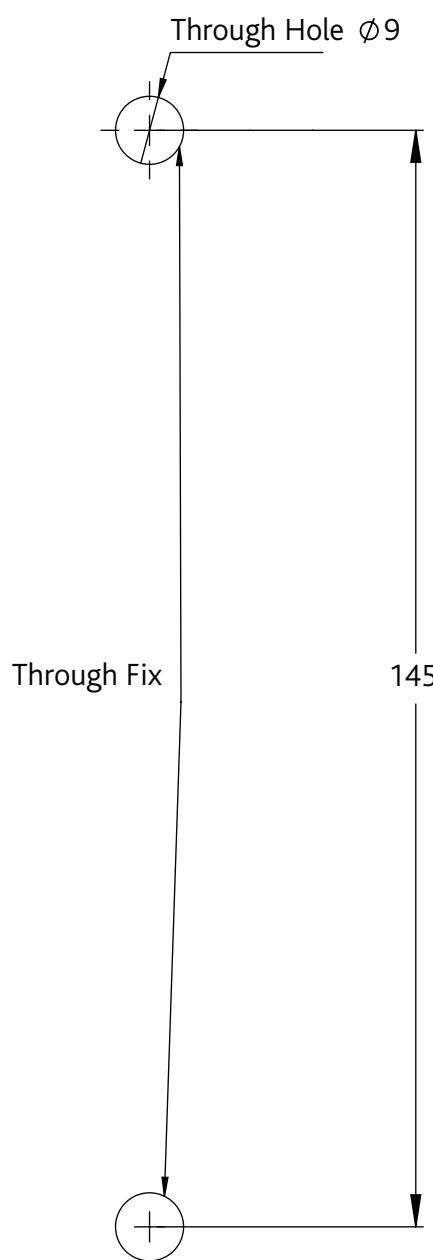

Scale 1:1

Product Dimensions

